

IXVLF

VLF Processing and Display With Hjelt Depth Sections


IXVLF Data Entry/Edit

Data Set Name: DemoNorth

In-Phase


No.	Station	100E	200E	300E	400E	500E	600E	700E	800E
1	-600.00				-79.000				
2	-590.00	-3.000	-11.300	-6.700	-77.000			-85.300	-1.100
3	-580.00	-2.100	-5.000	-3.900	-80.400		-99.900	-99.900	-11.100
4	-570.00	2.800	-6.000	-6.400	-77.600		-99.900	-99.900	-21.300
5	-560.00	-6.500	-5.100	-8.500	-79.600	-94.600	-99.900	-99.900	-26.900
6	-550.00	-2.100	-0.400	-5.700	-80.300	-99.900	-53.200	-99.900	-0.400
7	-540.00	-1.900	-1.300	-12.300	-77.700	-99.900	-72.000	-99.900	-3.200
8	-530.00	-0.400	-4.900	-11.300	-77.100	-99.900	-88.600	-28.500	-9.100
9	-520.00	-4.200	-12.700	-11.300	-77.700	-99.900	-72.700	-90.800	-10.400
10	-510.00	-4.400	-9.000	-7.400	-82.800	-46.700	-37.400	-99.900	-6.100
11	-500.00	0.500	-6.700	-10.600	-89.000	-99.900	-58.800	-99.900	-29.300
12	-490.00	-5.200	-0.600	-5.900	-81.300	-99.900	-30.800	-96.700	-0.600
13	-480.00	-1.100	-6.100	-7.700	-81.100	-86.200	-63.200	-43.300	-30.800

OK Cancel

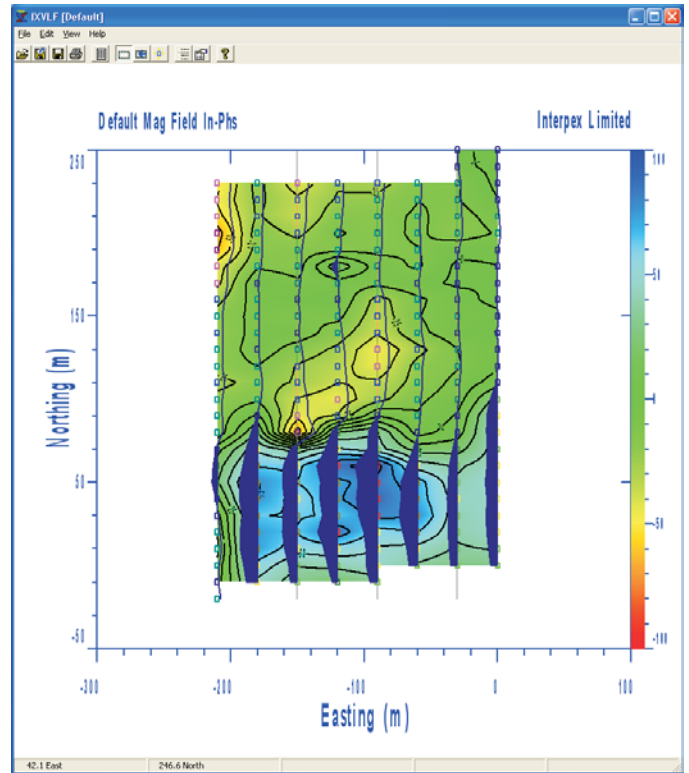

You can edit:

- ▶ Station Locations
- ▶ In-Phase
- ▶ Quadrature
- ▶ Tilt Angle
- ▶ Ellipticity
- ▶ Field Strength

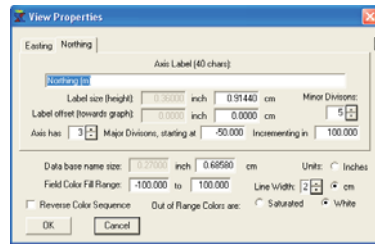

- ▶ Easy toggle of profiles to display
- ▶ Easy addition, deletion and editing of labels
- ▶ Control of scale for color fill range
- ▶ Map Display Parameters accessible from menu or Dialog
- ▶ Tabbed View Properties Dialog

